


Loading the Ribbon

Make sure that you have a KODAK Photo Print Kit 6800/4R or KODAK Photo Print Kit 6800/6R available. These kits contain the correct size ribbon for your printer. See Appendix A for details on the Photo Print Kits (sold separately).


NOTE: Images remain on the ribbon after printing. If you need to maintain confidentiality, dispose of the used ribbon appropriately.

1. If you are replacing a ribbon, remove the used ribbon.
2. Insert your fingers into the holes in the plastic wrapper on the end of the ribbon. Remove the plastic wrapper from the ribbon.


IMPORTANT: *Do not remove the label from the ribbon at this time.*

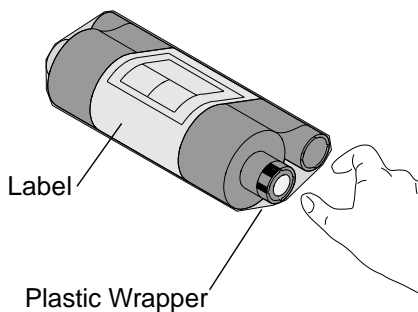

3. Insert the bar code end of the supply spool into the spool holder on the right.
4. Insert the left side of the supply spool into the spool holder on the left.
5. Adjust the supply spool until the spool locks into the spool holder.

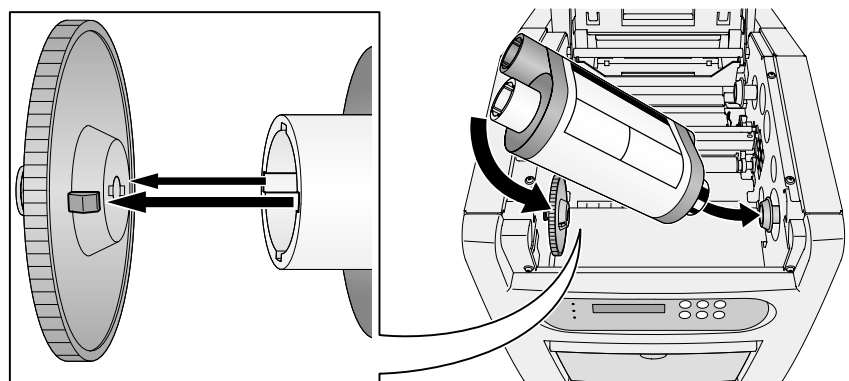


6. Remove the label.

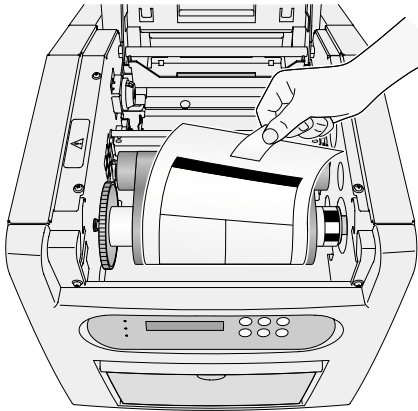

7. Insert the right side of the take-up spool into the spool holder on the right.
8. Insert the left side of the take-up spool in the spool holder on the left.
9. Adjust the take-up spool until the spool locks into the spool holder.

IMPORTANT: *Slack in the ribbon can cause a paper jam.*

10. Turn the supply spool to remove any slack in the ribbon.
11. Close the top cover.

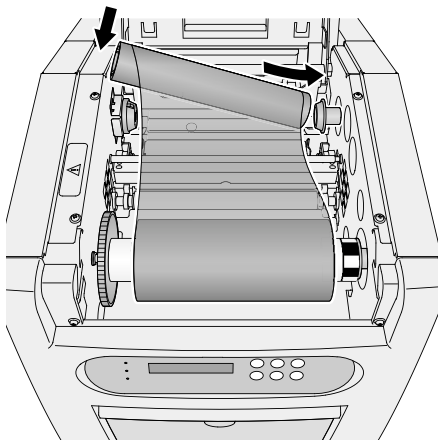


Turning On the Printer

1. Press the power switch to on (|).

On the operator panel, the orange Power light illuminates and the Ready message appears when the printer is initialized.

2. To turn off the printer, press the power switch to off (○).

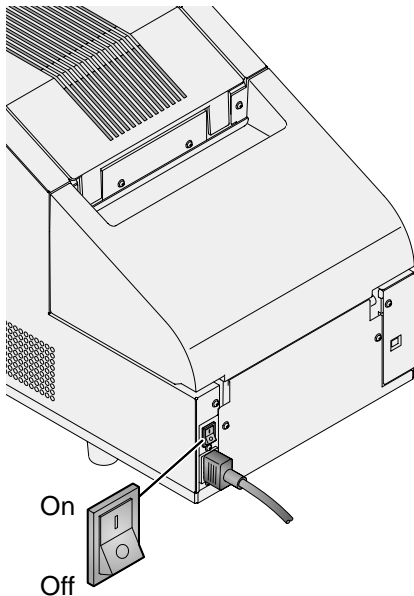

Loading the Paper


Make sure that you have a KODAK Photo Print Kit 6800/4R or KODAK Photo Print Kit 6800/6R available. These kits contain the correct size paper for your printer. See Appendix A for details on the photo print kits (sold separately).

1. Make sure that the printer power is on (|).
2. Remove the plastic from the new paper roll.


IMPORTANT: *Do not remove the label from the paper roll until you have successfully loaded the paper in the printer.*


3. Attach the paper flanges to each end of the paper roll.
 - a. Align the lugs on the green paper flange with the notches on the paper roll.
 - b. Insert green paper flange into the notched end of the paper roll.
 - c. Insert the black paper flange on the paper roll.

NOTE: Be sure to match the lugs on the green paper flange with the notches on the left side of the paper roll. If you do not attach the paper flange correctly, the paper roll will not fit into the printer.

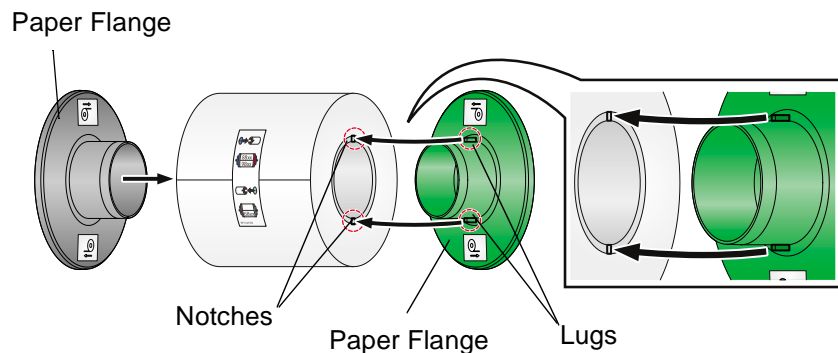

4. Open the paper door.

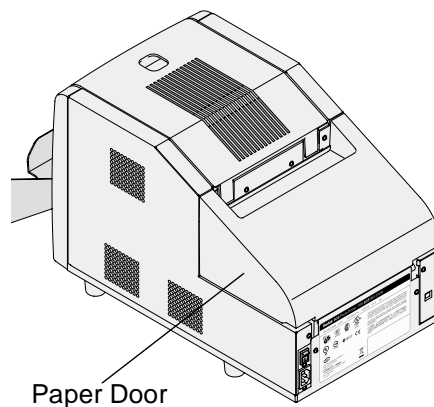


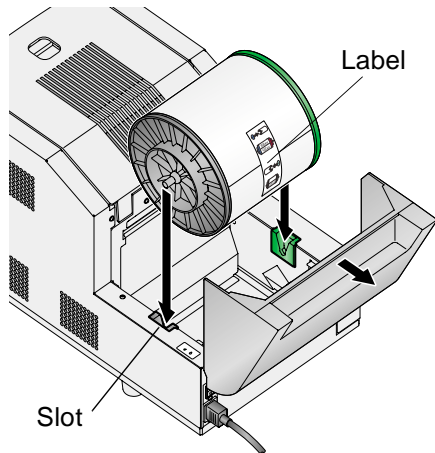

5. Carefully lower the paper roll into the slots. Match the geared flange (green) with the geared slot (green) on the printer.

6. Remove the label from the paper roll.

NOTE: Verify that the paper unrolls from the top of the roll.

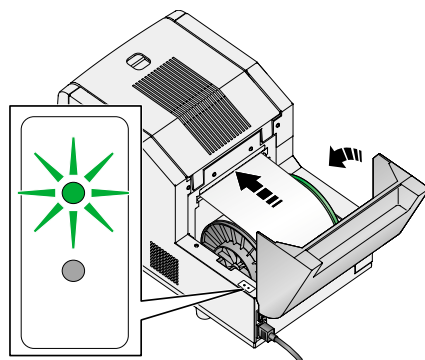

7. Feed the paper into the rear printer slot until the red LED light turns off and the green LED light turns on.


8. Close the paper door.

NOTE: Ribbon must be loaded in the printer before the paper automatically advances.

The printer advances the paper, then cuts and discharges 6 blank test prints—about 24 in. (61 cm). This reduces the possibility of fingerprints or other damage to the prints. It does not decrease the 750 4 x 6 in. (10 x 15 cm) print capacity of the paper roll.

The operator panel displays the Ready message.

IMPORTANT: *You must empty the trim tray each time you change the paper to keep your prints dust-free and to prevent paper jams.*

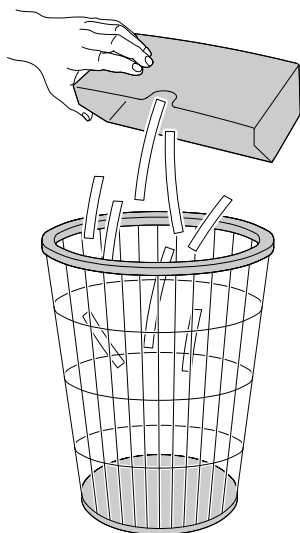

9. Empty and replace the trim tray.